

SENSO

ActiveBuds S-300



Wireless
Sports
Headphones



User Guide

SensoShop.com
support@sensoshop.com
24 / 7 Live Support
1-888-683-4914

PACKAGE CONTENTS



Senso
Stereo Bluetooth
Wireless Headphones



Eartips - 3 Pairs
(Small, Medium, Large)



Earhooks - 3 Pairs
(Small, Medium, Large)



Charging Cable




Carrying Case



Wire Tie

PRODUCT OVERVIEW

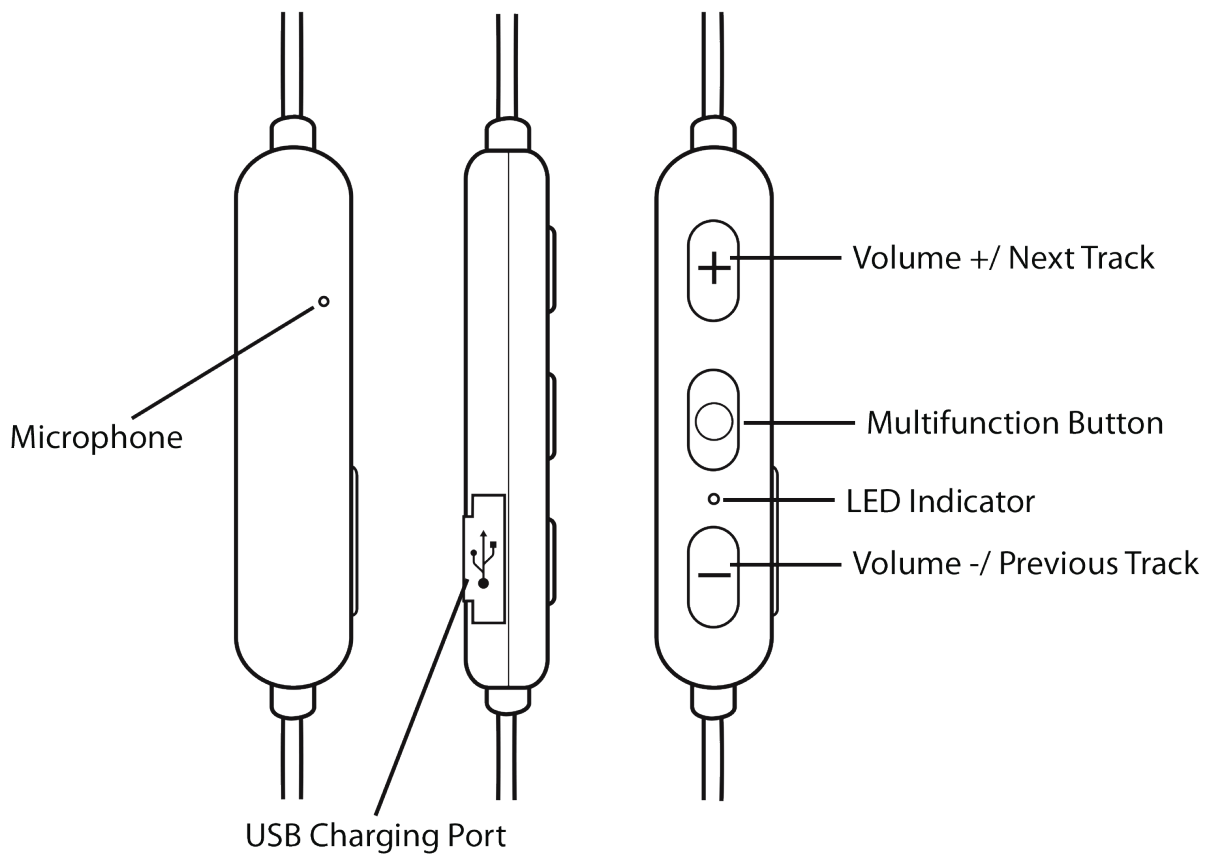

Button Control

Function	Operation
Power ON	When off, press and hold the multifunction button for 2 seconds
Power OFF	When on, press and hold the multifunction button for 3 seconds
Play / Pause	Press the multifunction button once in audio mode
Volume + / -	Press the Volume + or Volume - button once
Next / Previous Track	Press and hold the volume + or - button for 2 seconds
Answering Phone Call	When you receive an incoming call, press the Multifunction button once
End a Phone Call	During a call, press the Multifunction button once
Reject a Phone Call	When you receive an incoming call, press and hold the Multifunction button for 2 seconds
Number Redial	Press the Multifunction button twice to redial the latest phone number
Pairing Mode	When the headphone is off, press and hold the Multifunction button for 5 seconds until the LED indicator flashes red and blue

LED Indicators

LED Indicator	Status
Red - Solid	Charging
Blue - Solid	Fully Charged
Blue and Red - Flashing	In Pairing Mode
Blue - Flashes every 2 seconds	Not paired with any device
Blue - Flashes every 5 seconds	Paired with a device
Red - Flashing	Low Battery

How to Use

Charging

- 1.) Connect the charger to the USB port on the headphone
- 2.) Connect the USB on other end of the charger to any USB charging adapter or active computer USB port
- 3.) The LED indicator will turn solid red when charging.
- 4.) The LED indicator will turn solid blue when charging has completed.

Charging takes between 1 and 2 hours. The headphone performs best when fully charged.

Pairing

- 1.) Make sure the headphone and the Bluetooth device are in close proximity to each other (within 3 feet)
- 2.) With the headset turned off, press and hold the Multifunction button for 6 seconds until the red and blue lights flash alternately. You will also hear a voice prompt, "Pairing state" in the earphone.
- 3.) Turn on the Bluetooth function on your phone and search for nearby devices
- 4.) Find "ActiveBuds S300" in the search results and tap on it to connect.
- 5.) Once connected, LED indicator will flash blue

Note:

- If a PIN code is requested during pairing, enter "0000" (four zeros) or "8888" (four eights)
- The Bluetooth headphone will remember previously paired devices and will attempt to pair with the last connected device automatically

Pairing with Two Bluetooth Devices at the Same Time

You can pair your headphones with two devices, but only one of them can play music or make phone calls with the headphones at any time

- 1.) Follow the previous instructions in the ``Pairing`` section above to pair the headphone to your first device.
- 2.) Turn off the Bluetooth function on your first device and follow the pairing instructions above again to pair to your second Bluetooth device

Note:


If a PIN code is requested during pairing, enter ``0000`` (four zeros) or ``8888`` (four eights)

The Bluetooth headphone will remember previously paired devices and will attempt to pair with the last connected device automatically

How to Wear

Please wear your headphones as indicated in the following diagrams:

- 1.) Attach the ear hooks and the earbuds to the headphones. For the best fit, please position the ear hooks as shown in the diagram:

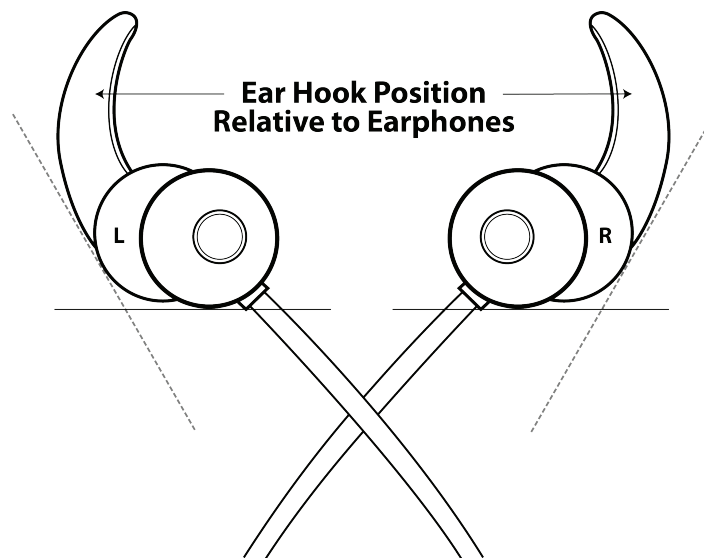

- 2.) Insert the earbuds into your ears holes and adjust the ear hooks as shown in the following diagram:



NOTE:

- Three sizes of ear hooks and earbuds are provided, please try all three sizes to see which one fits the best.
- Each earphone is marked by an “L” and “R” on the headset, they indicate the left side and right side respectively.

Restoring the Factory Settings

To restore the factory settings, press and hold the Multifunction key for 3 seconds when the unit is being charged, until the red and blue lights have flashed three times. Release the key.

Troubleshooting

Q: My headphone will not turn on.

A: Please make sure your phone is recharged and has enough power. Plug the headphone to a charger and check if the LED indicator becomes solid red.

Q: Pairing to a Bluetooth device doesn't work

A: Please do the following:

Make sure the headphone is turned on and the LED indicator is flashing blue and red

Make sure the headphone and the Bluetooth device are close to each other within 3 feet

Turn off the headphones and the Bluetooth device, then turn on the headphones and then restart Bluetooth device. Then retry the pairing method.

Restore the factory settings as are indicated above

Make sure your Bluetooth device supports A2DP

Q: After pairing, the headphone disconnects or there is too much background noise.

A: Please do the following:

- Recharge your headphone, the power may be too low.
- Units are out of range (10 meters maximum). Bring units closer together.
- Remove any object (electrical or magnetic) that may be interfering or blocking the signal between units

Q: After pairing and connecting with my Bluetooth device, I can not hear music/audio

A: Please check the following:

- Your Bluetooth device is connected to the headphone. The LED indicator should flash blue once every 5 seconds

- Make sure the volume is at an audible level on both your headphone and the Bluetooth device
- Make sure the Bluetooth device is playing music/audio
- Some phones do not have the full stereo music function. Check by connecting to another cellphone to test the headphone

Q: There is too much background noise

A: The headphone and Bluetooth device are too far from each other (max 10 meters). Bring the devices closer together.

Q: The Bluetooth Device asks for a password / pin while pairing

A: Most Bluetooth devices don't require a password / pin during pairing, but enter "0000" (four zeros) if asked

Q: The LED indicator does now show solid red when charging the headphone

A: The headphone has been discharged for too long. Leave the unit on charge for about 30 minutes and the LED indicator should show solid red

Note:

Overcharging or keeping the headphones in a closed car or similar environment for long periods will reduce the capacity and life of the battery.

It is not recommended to charge your headphones overnight

Safety and Care

- 1.) Although the Senso headphones are equipped with necessary battery regulators, it is recommended not to use Quick / Fast Chargers which tend to over-charge the device and can reduce the lifespan of the battery substantially
- 2.) Do not charge headphones when they are wet due to sweat or other moisture
- 3.) Wipe away any excess sweat or moisture before and during use, any prolonged exposure to sweat can corrode the liquipel coating and can penetrate through and damage internal components
- 4.) Keep the headphones away from extreme heat and humidity. High heat will decrease the lifespan of the headphone and battery
- 5.) The headphones should be charged at least once every 6 months
- 6.) Clean with a soft cloth, damp with diluted soap water solution if necessary. Never use chemical cleaners
- 7.) Do not drop the headphone on hard surfaces
- 8.) Do not take the headphone apart
- 9.) When not in use, power the headphones off and store in a cool, dry place

WARNING:

Using headphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety.

It is advised to turn the volume on your device all the way down before connecting your headphones, then gradually increase the volume until you reach a comfortable listening level.

SENSO

SensoShop.com

Please contact us at any time 24 / 7 / 365
if you have any questions or concerns:

 **1-888-683-4914**

 **support@sensoshop.com**